


# Installation Instructions

## Surface Pulls

PM-ISPPIX  
V20251224


UNISON HARDWARE, INC.  
www.inoxproducts.com

### BTB U Style

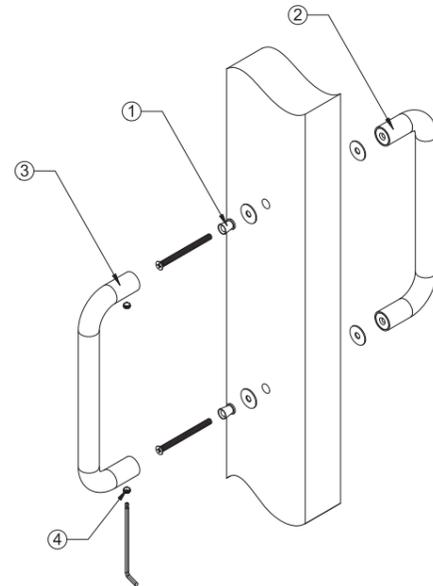


1. Insert the screw through the threaded adapter and the PVC washer, then into the mounting hole on the door.
2. Slide a PVC washer onto the screw, then tighten the threaded surface pull onto it.
3. Align the foot of the non-threaded surface pull with the threaded adapter and insert it.
4. Use a hex key to tighten the fastening screw on the surface pull.

### BTB U Style (with Threaded Rod)

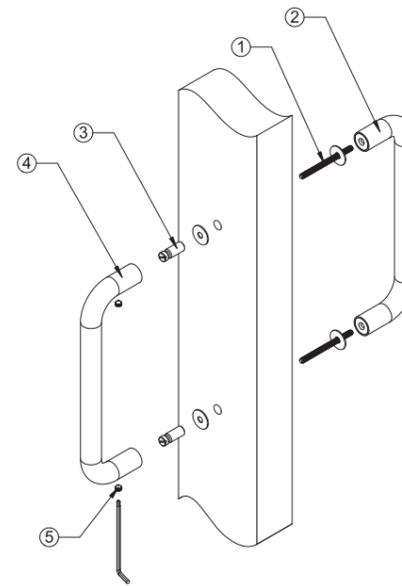


1. Install the threaded rod into the base of the threaded surface pull.
2. Slide a PVC washer onto the threaded rod, then insert the rod through the mounting hole in the door.
3. Place another PVC washer onto the threaded rod, then install and tighten the threaded adapter.
4. Fit the non-threaded surface pull onto the threaded adapter.
5. Use a hex key to tighten the fastening screw on the surface pull.

### BTB T Style (Single-sided Threaded Adapter)

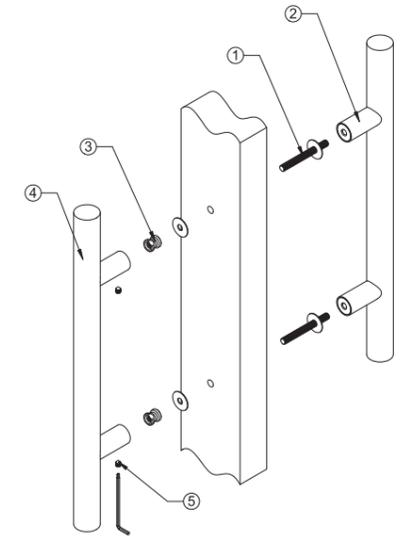


1. Install the threaded rod into the base of the surface pull with internal threads.
2. Slide a PVC washer onto the threaded rod, then pass the rod through the mounting hole on the door.
3. Place another PVC washer onto the threaded rod, then install and tighten the threaded adapter.
4. Fit the surface pull (without internal threads) onto the threaded adapter.
5. Use a hex key to tighten the fastening screw on the surface pull.

### BTB T Style (with Dual-sided Threaded Adapter)

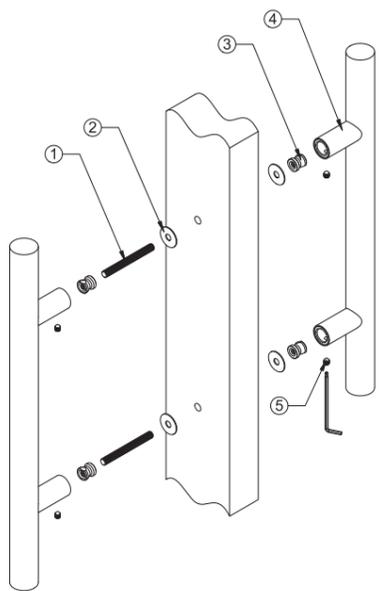


1. Insert the threaded rod through the mounting hole on the door.
2. Slide PVC washers onto both ends of the threaded rod from each side of the door.
3. Screw the threaded adapters onto both ends of the rod from each side of the door and tighten them.
4. Fit both surface pulls onto the threaded adapters.
5. Use a hex key to tighten the fastening screws on the surface pulls.

### BT T Style (with Round-head Screw and Threaded Adapter)

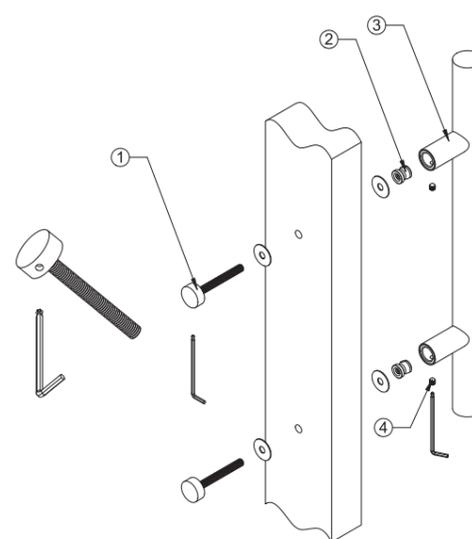


1. Pass the round-head screw first through the PVC washer, then through the mounting hole in the door.
2. Slide a PVC washer onto the threaded rod, then install and tighten the threaded adapter.  
(A hex key can be inserted into the auxiliary installation hole on the round-head screw to assist in tightening the threaded adapter.)
3. Fit the base of the surface pull onto the threaded adapter.
4. Use a hex key to tighten the fastening screw on the surface pull.

### BT T Style (with Wood Screw and Threaded Adapter)

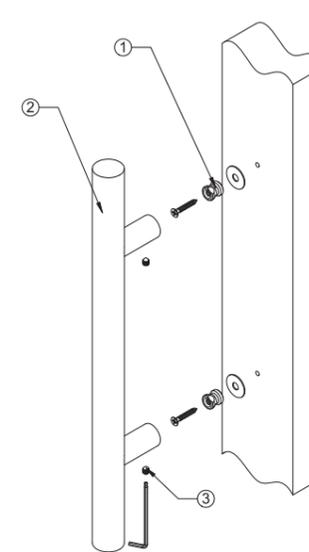

1. Pass the wood screw through the threaded adapter and the PVC washer in sequence, then screw it into the door.
2. Fit the base of the surface pull onto the threaded adapter.
3. Use a hex key to tighten the fastening screw on the surface pull.

### BT T Style (with Round-head Screw)

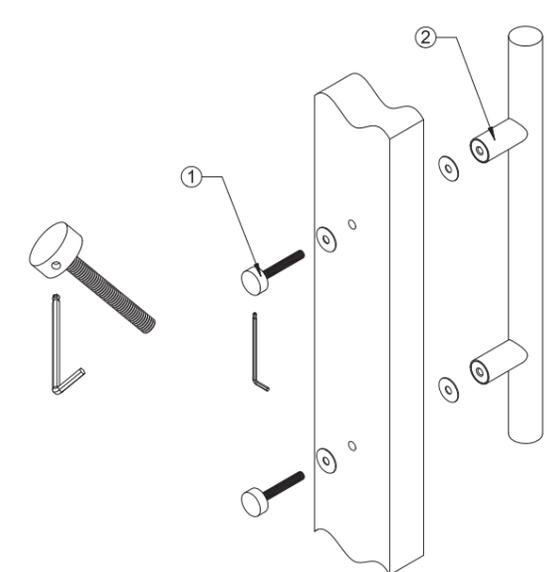

1. Insert the round-head screw through the PVC washer first, and then through the mounting hole on the door.
2. Slide a PVC washer onto the threaded rod, then install the surface pull onto the rod and tighten the round-head screw.  
(A hex key can be inserted into the auxiliary installation hole on the round-head screw to assist in tightening the surface pull.)