



Installation Instructions for Privacy
MC7096 with Coin Turn Indicator

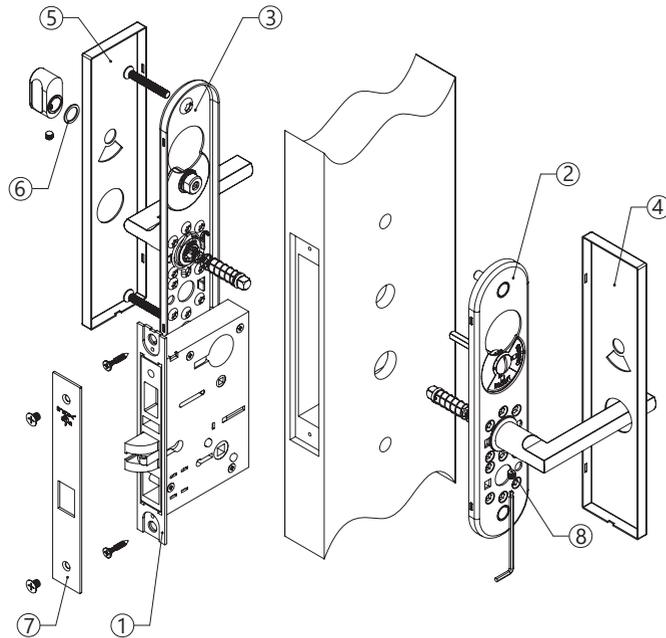


1. Install the mortise lockcase.
2. Mount the outside lever and sub-plate. Insert the 5x5mm thumbturn release spindle through the mortise deadbolt hub.
▲ Note: Insert the spindle when the lock bolt is retracted and showing "VACANT" in green.
3. Install the inside lever and sub-plate with 2 EA M6x45mm thru-bolts.
▲ Note: The outside spindle should be inserted into the brass rotating shaft when "VACANT" is displayed in green.
▲ Note: Ensure the levers on both sides are at horizontal level and plates are vertical before tightening the thru-bolts.
4. Mount the outside cover plate.
5. Mount the inside cover plate.
6. Install the clear washer before mounting the thumbturn. Tighten the set screw inside the thumbturn using the Allen key.
7. Install the armored faceplate with screws.
8. Tighten both inside and outside lever set screws after installation is complete.
▲ Note: Lever set screws may need to be loosened prior to installation if they are preventing the spindle or lever from moving freely by spring action.

Installation Instructions SF Fan Indicator

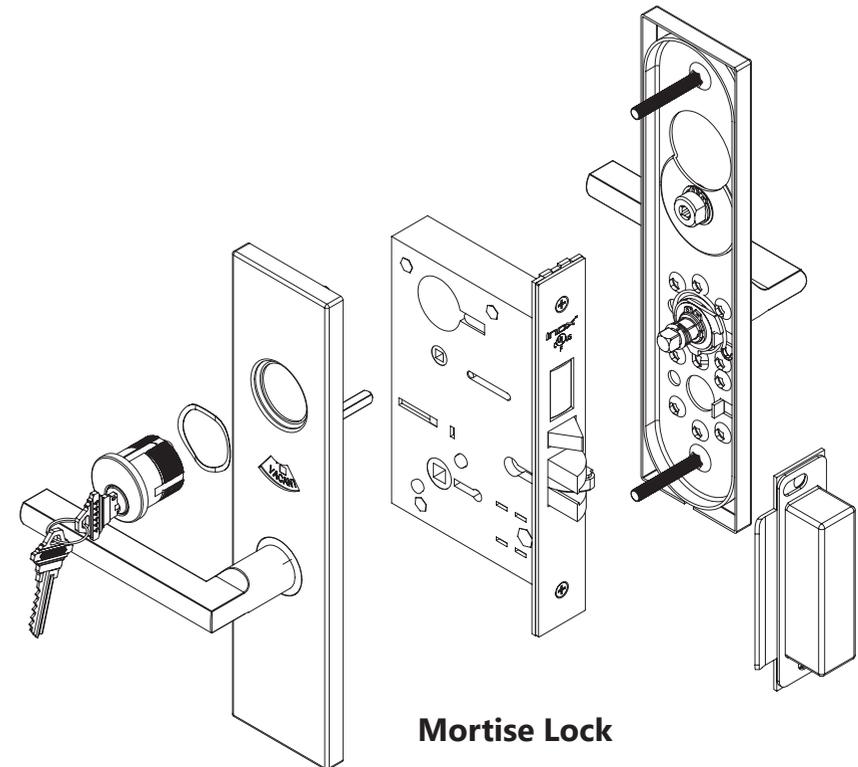


Mortise Lock

Item	Parts Description	Function			
		Office and Inner Entry 7050	Classroom 7070	Privacy w/ Indicator 7096	Entrance 7438
A	Outside Entrance Trim	1EA	1EA	-	1EA
B	Outside Privacy Trim	-	-	1EA	-
C	Inside Classroom Trim	-	1EA	-	-
D	Inside Trim	1EA	-	1EA	1EA
E	Cylinder & Keys	1EA	1EA	-	1EA
F	Thumbturn	1EA	-	1EA	1EA
G	Mortise Lock & Faceplate	-	-	-	1EA
H	Mortise Lock & Faceplate	1EA	1EA	-	-
I	Mortise Lock & Faceplate	-	-	1EA	-
J	Strike Plate w/Dust Box	1EA	1EA	1EA	1EA
K	Fixing Pack	1EA	1EA	1EA	1EA

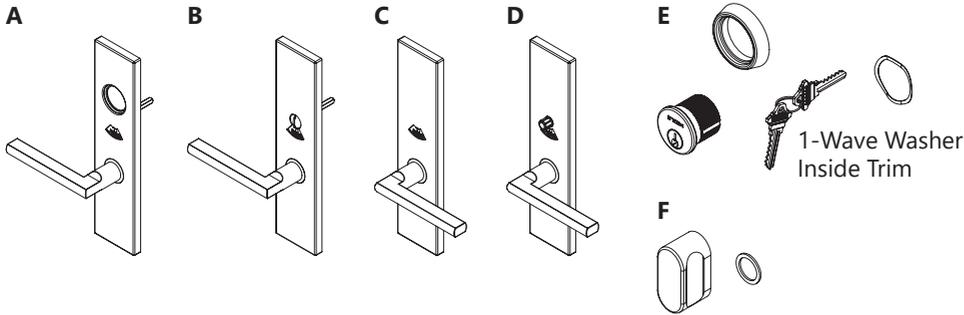


G (MC7438)

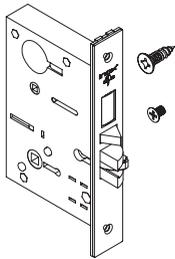


2-#12x20mm Combo Screw
2-M4x6mm Machine Screw

H (MC7050/7070)

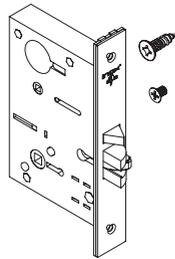


2-#12x20mm Combo Screw
2-M4x6mm Machine Screw

I (MC7096)

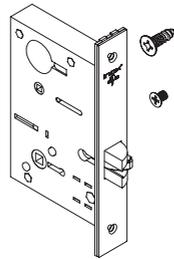

2-#12x20mm Combo Screw
2-M4x6mm Machine Screw

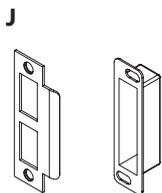


2-#12x20mm Combo Screw



2-M6x45 Machine Screw
2-M6x30 Nut
1-3mm Allen Key

Installation Instructions for Office/Inner Entry, Classroom, Entrance MC7050,MC7070,MC7438 with Indicator

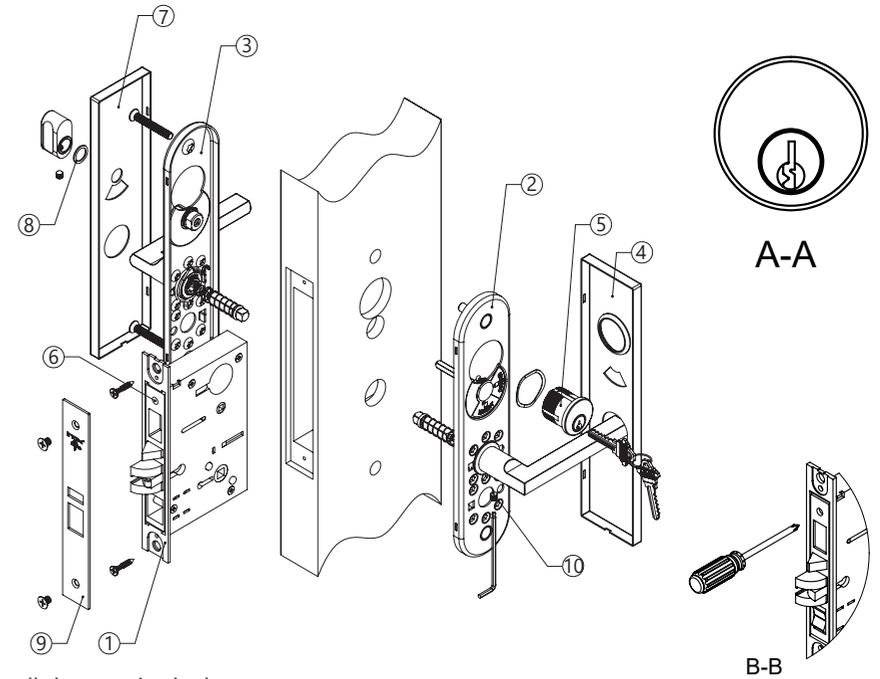

1. Install the mortise lockcase.
▲ Note: Do NOT tighten faceplate screws until after installing the cylinder.
2. Install the outside lever and sub-plate with 2 EA M6 x 30mm bolt sleeves.
▲ Note: Insert the spindle when the lock bolt is retracted and showing "VACANT" in green.
3. Install the inside lever and sub-plate with 2 EA M6 x 45mm thru-bolts.
▲ Note: Ensure that levers on both sides are at horizontal level and plates are vertical before tightening thru-bolts.
▲ Note: The outside spindle should be inserted into the brass rotating shaft when "VACANT" is displayed in green.
4. Mount the outside cover plate (snap-on).
5. Install the outside cylinder.
▲ Note: Key slot in cylinder should be in the lower off-center position. See Section A-A.
▲ Note: Use keys to test cylinder and make sure cylinder cam operates deadbolt smoothly.
6. Insert a screwdriver through the lock face to tighten the yoke. This will secure the cylinder into position. See Section B-B.
7. Mount the inside cover plate.
8. For entry function, install the clear washer before mounting the thumbturn. Then tighten the set screw inside the thumbturn using the Allen key.
▲ Note: Classroom function does not require a thumbturn on the inside.
9. Install the armored faceplate with screws.
10. Tighten both inside and outside lever set screws after installation is complete.
▲ Note: Lever set screws may need to be loosened prior to installation if they are preventing the spindle or lever from moving freely by spring action.