


Template For PD5000 (2-3/4" Backset) Mortise Locks with Surface Pulls for Sliding/Barn Doors

Case Size: 3-21/32" x 4-3/32" x 11/16"(93mm x 104mm x 17mm)

Backset: 2-3/4"(70mm)

Lock Front: 1" x 5-1/2" x 15/64"(25.4mm x 140mm x 6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

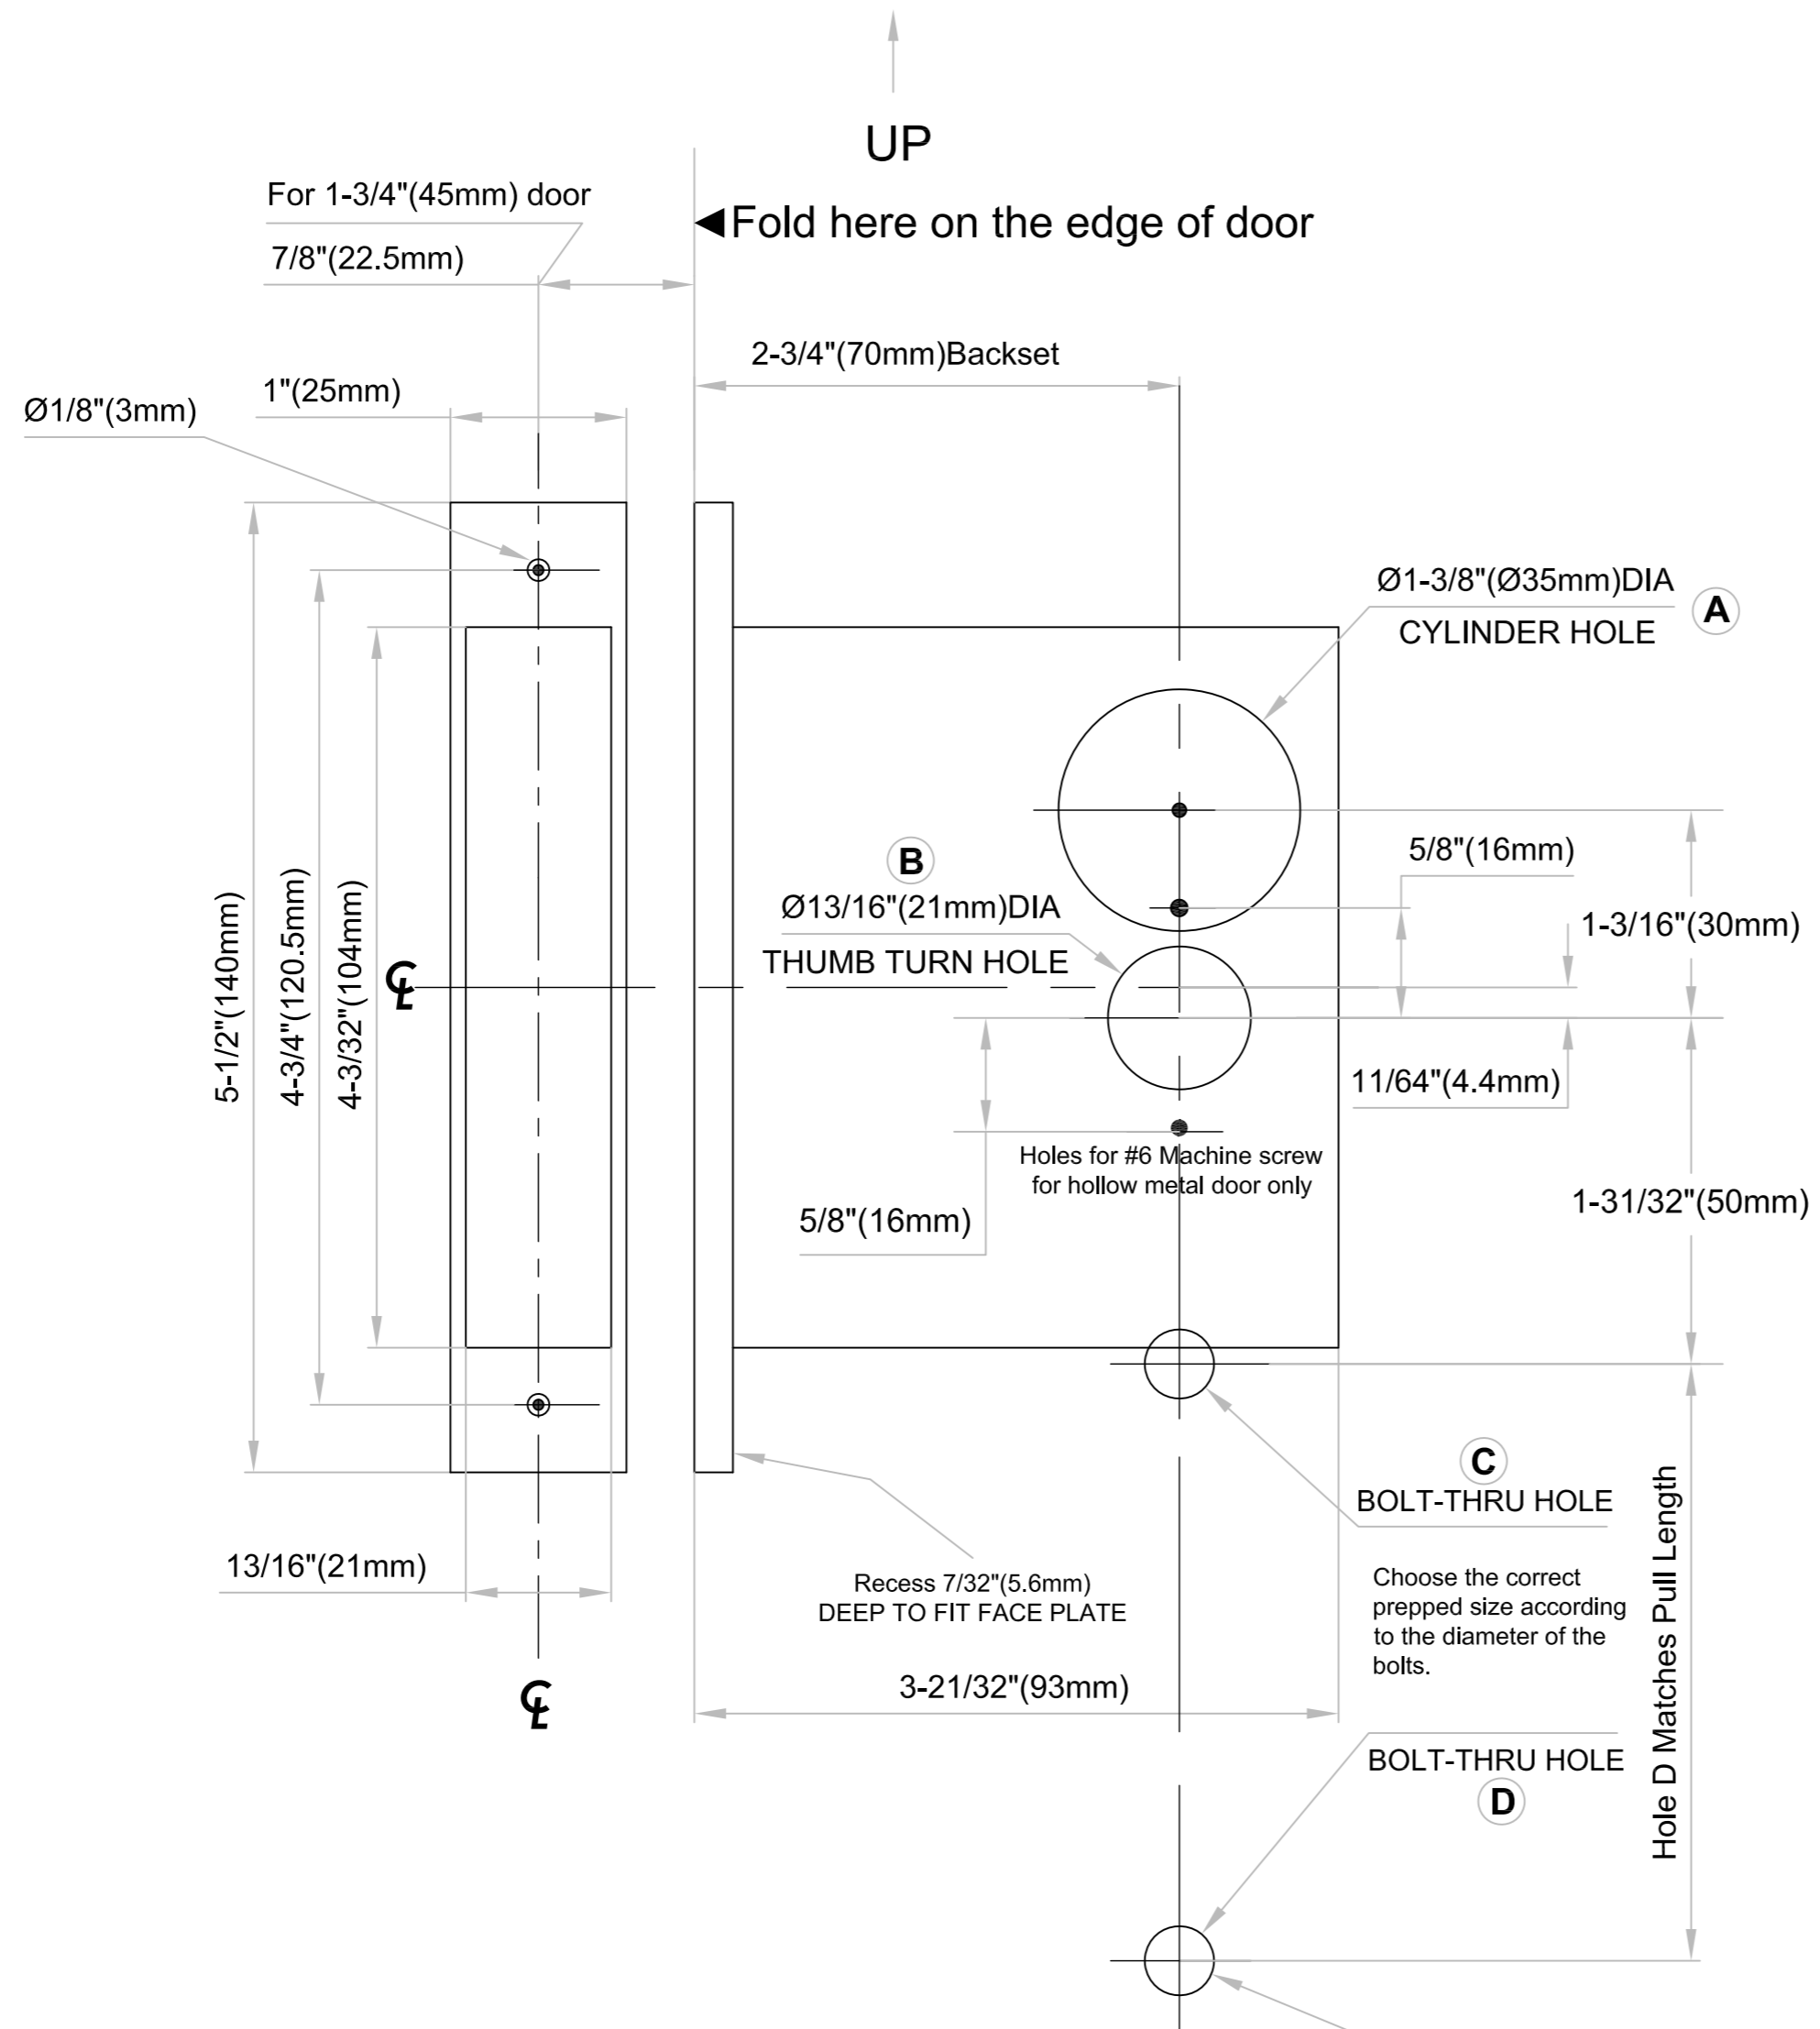

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door. Choose the correct holes to drill for the corresponding functions.

Function	Item Ref.	Outside Holes				Inside Holes			
		A	B	C	D	A	B	C	D
PD5215	...XXX...			●	●			●	●
PD5340	...XXX...		●	●	●		●	●	●
PD5350	...XXX...	●		●	●		●	●	●
PD5360	...XXX...			●	●		●	●	●
BTB	...XXX...								

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door

C **D** BOLT-THRU HOLE

Bolt Size	Hole Size
M5	Ø1/4"(6.35mm)
M6	Ø19/64"(7.5mm)
M8(Wood Door)	Ø3/8"(9.5mm)
M8(Glass Door)	Ø33/64"(13mm)


Template For PD5000 (2-3/4" Backset) Mortise Locks with Surface Pulls for Sliding/Barn Doors

Case Size: 3-21/32" x 4-3/32" x 11/16"(93mm x 104mm x 17mm)

Backset: 2-3/4"(70mm)

Lock Front: 1" x 5-1/2" x 15/64"(25.4mm x 140mm x 6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

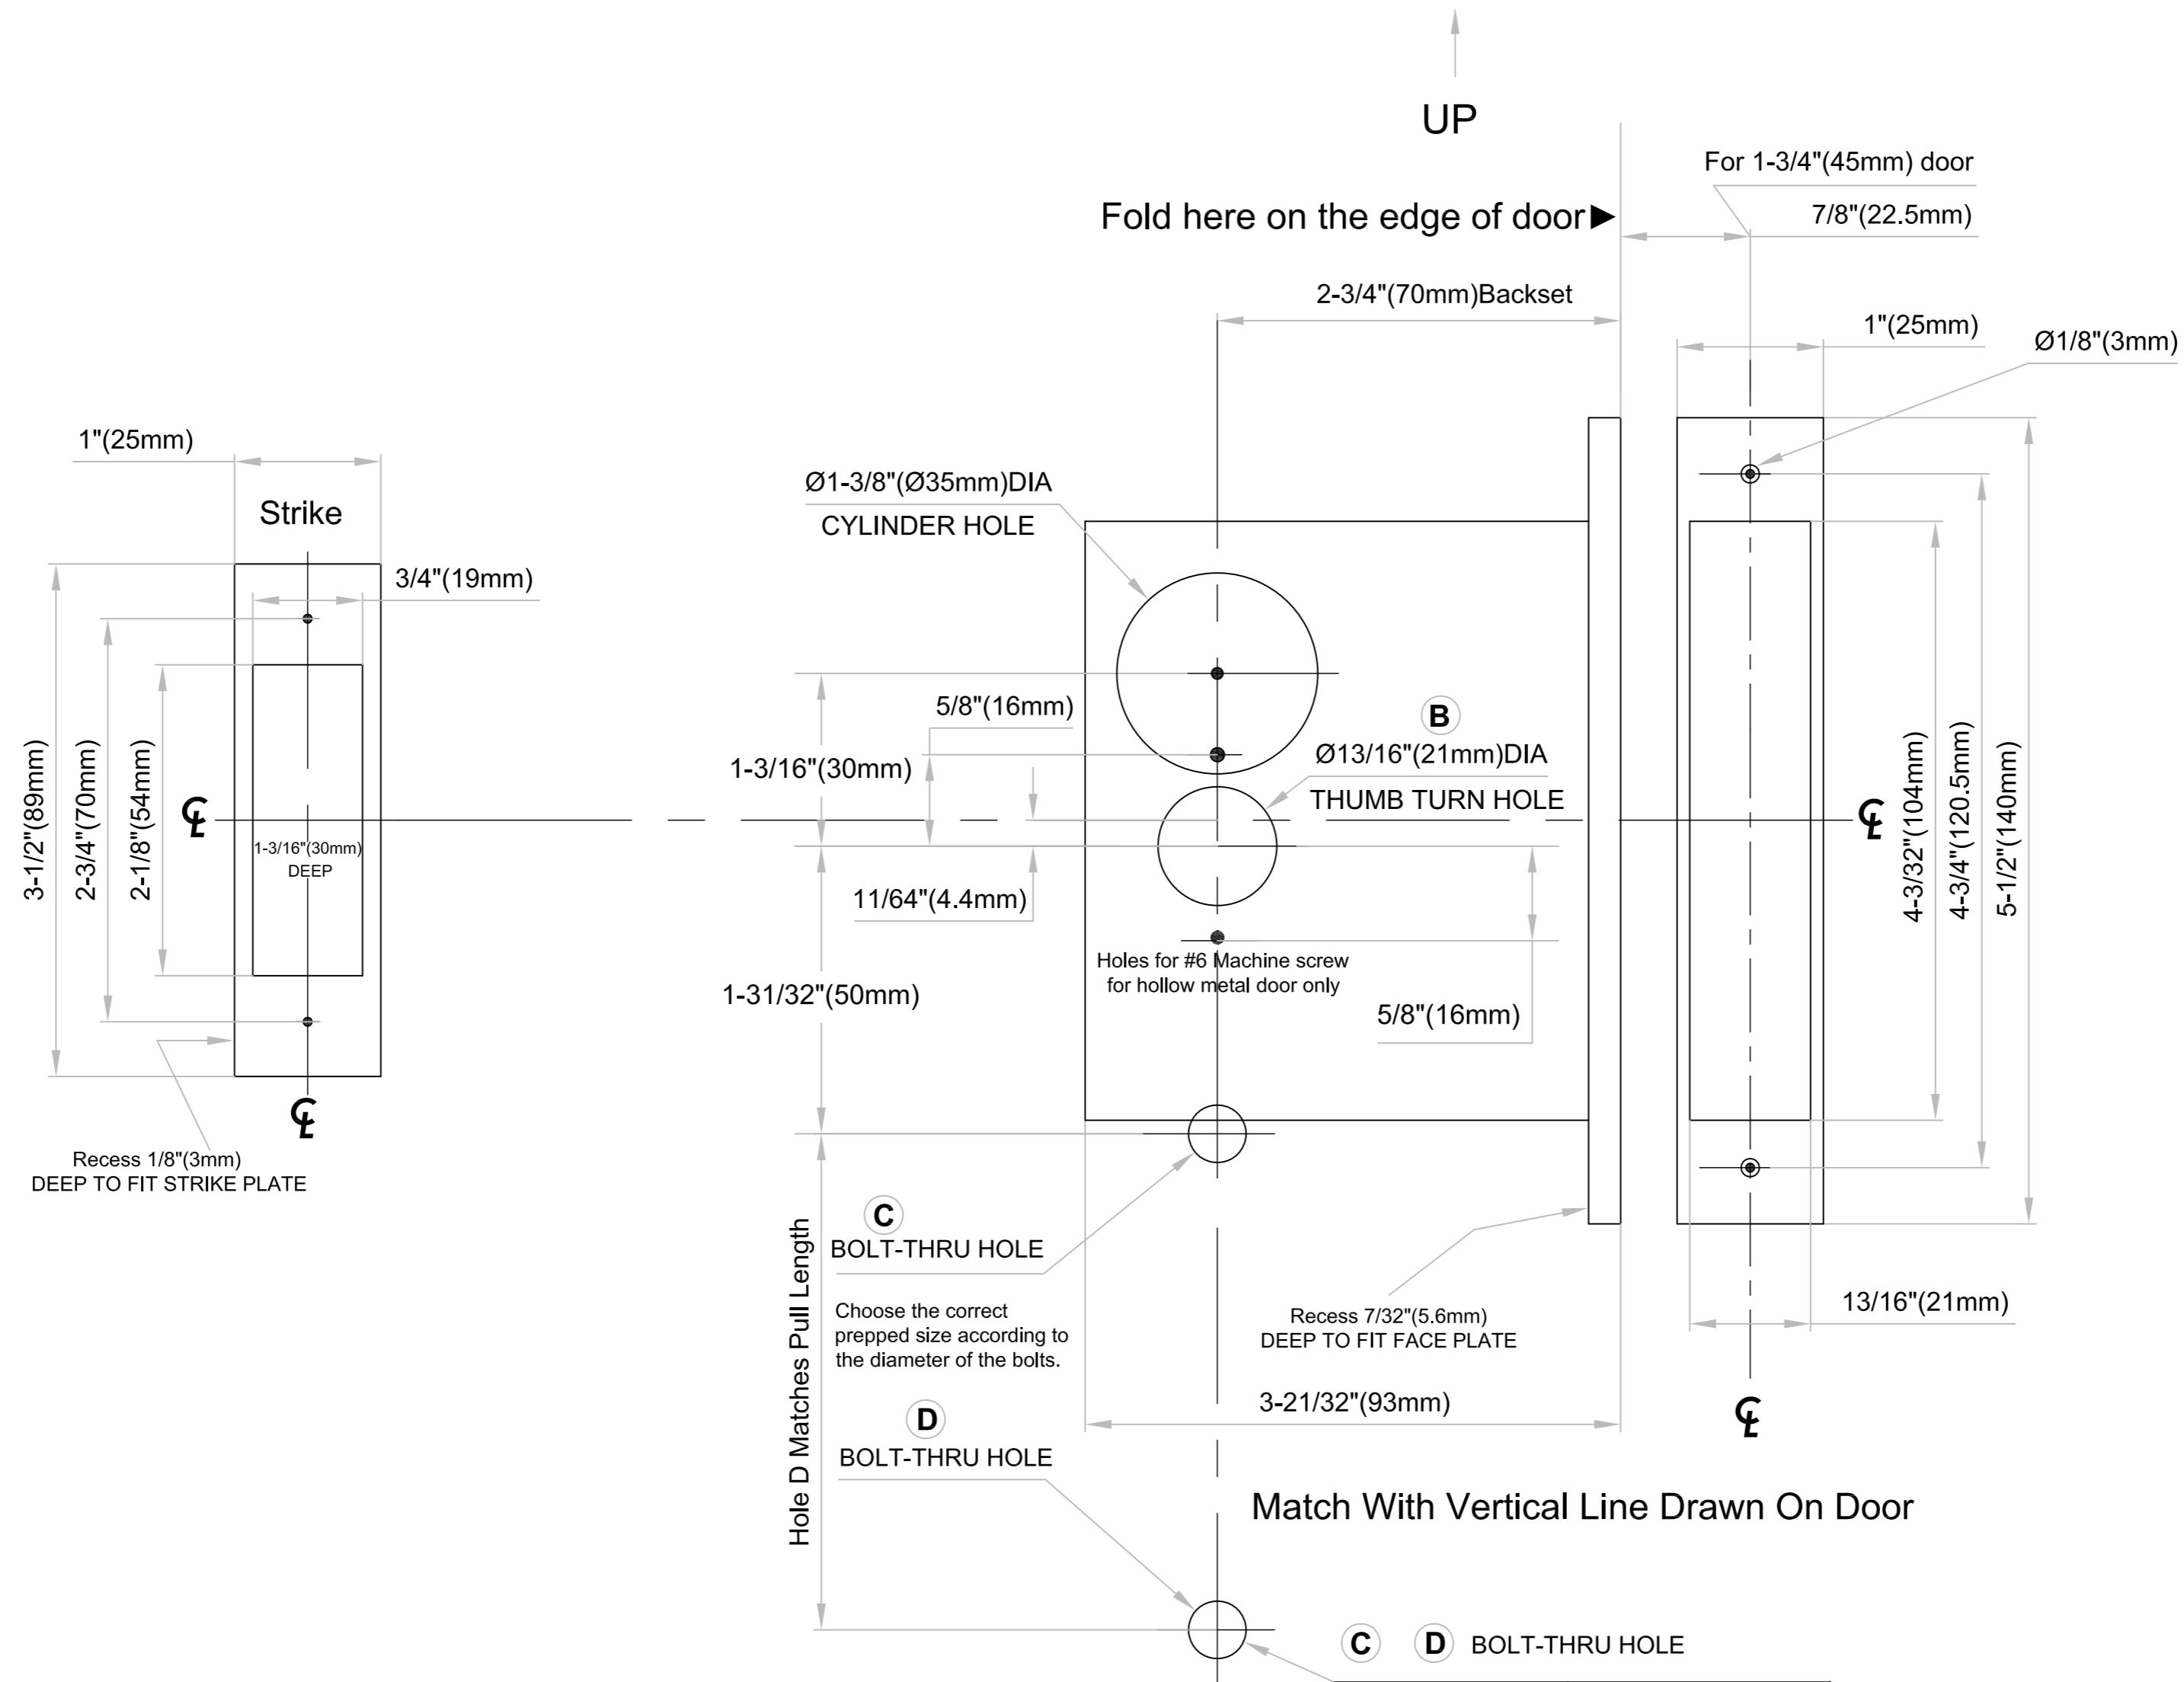

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.