




Template For PD97PT/PD97ATL/PD97ES (2-1/2" Backset) Mortise Locks with XGT/XGS Lever or Surface Pull Trim for Emergency Egress lock (3D Adjustable Strike)

Case Size: 3-3/8" x 6-1/2" x 11/16"(86mm x 166mm x 17mm)
Backset: 2-1/2"(63.5mm)
Lock Front: 1" x 8" x 7/32"(25.4mm x 203mm x 5.6mm) Cylinder to Thumb Turn: 1-3/16"(30mm)

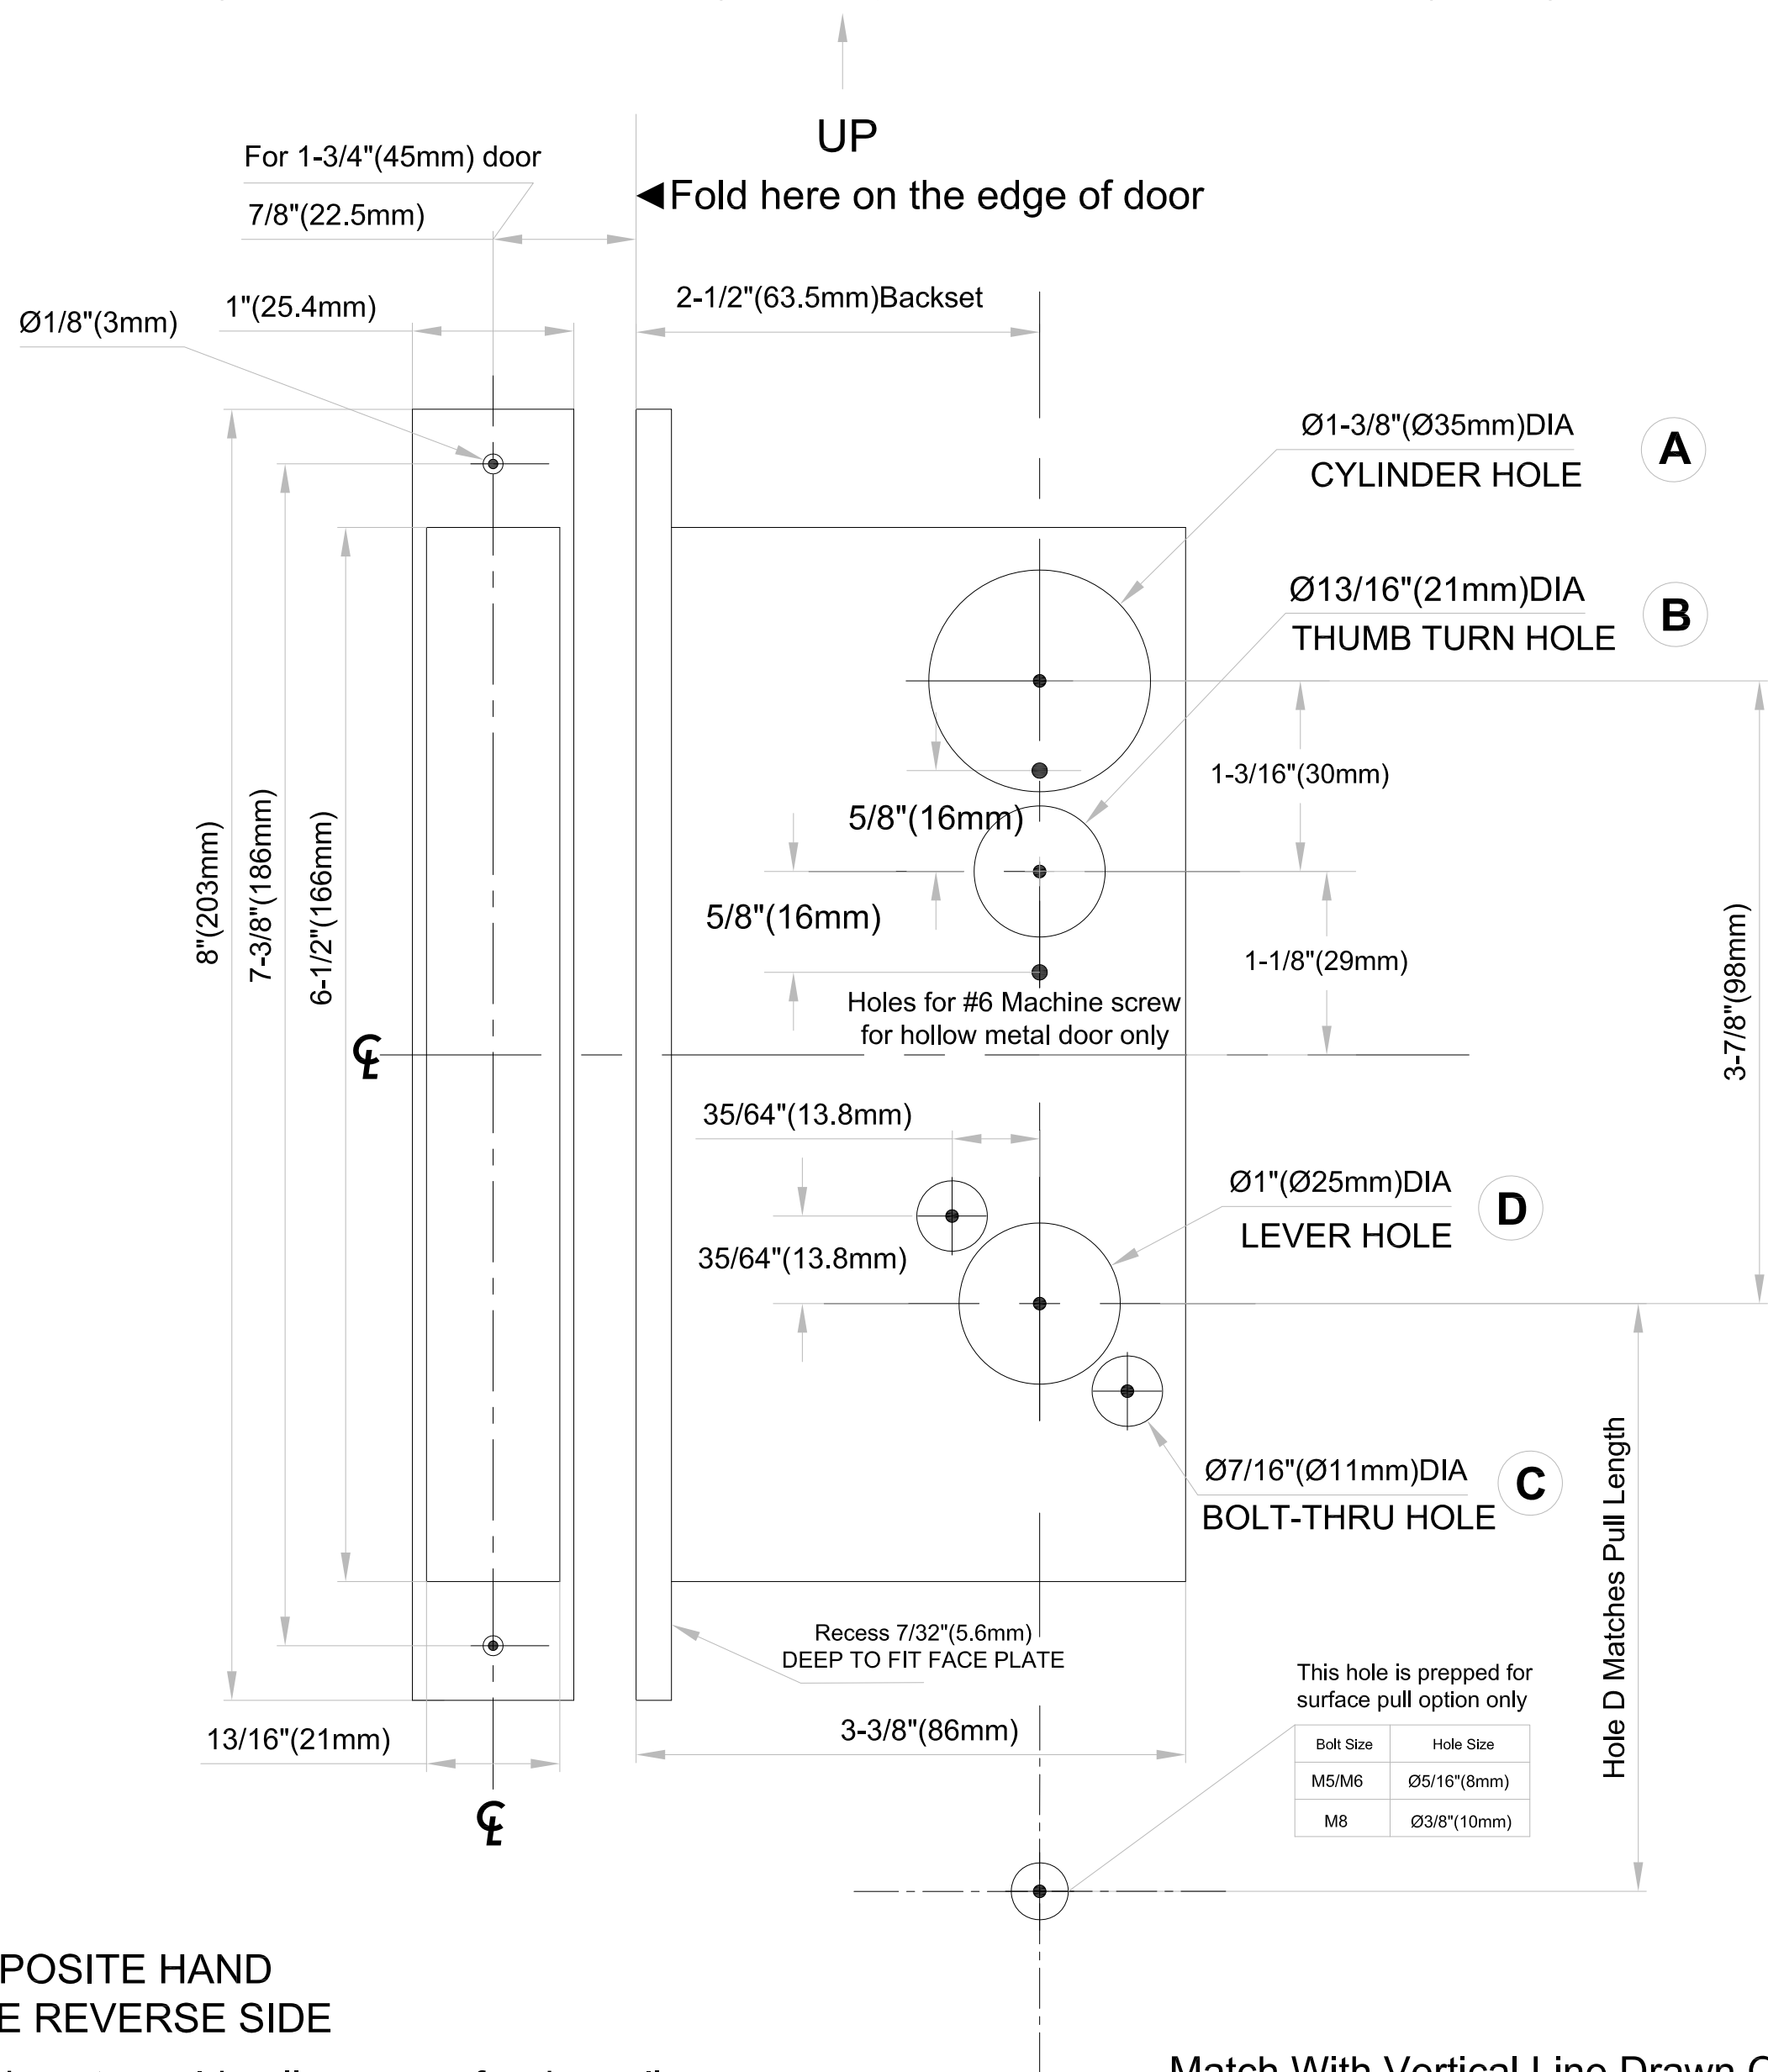

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door

Door preparation using template supplied.
Please read the Installation Instruction Carefully before drilling any holes on the door.
Choose the correct holes to drill for the corresponding functions.

Function	Item Ref.	Outside Holes				Inside Holes			
		A	B	C	D	A	B	C	D
Privacy	PD97PT40		●	●	●			●	●
Passage	PD97ATL10			●	●			●	●
Entry /Office	PD97PT50				●				
	PD97ATL53			●	●			●	●
Patio/Exit	PD97PT60				●				
	PD97ATL60				●			●	●
Classroom	PD97PT70								
Storeroom	PD97ATL80				●			●	
	PD97ES80								
Security Communicating	PD97PT95								●
	PD97ATL95							●	●
	PD97ES95								


Template For PD97PT/PD97ATL/PD97ES (2-1/2" Backset) Mortise Locks with XGT/XGS Lever or Surface Pull Trim for Emergency Egress lock (3D Adjustable Strike)

Case Size: 3-3/8" x 6-1/2" x 11/16"(86mm x 166mm x 17mm)

Backset: 2-1/2"(63.5mm)

Lock Front: 1" x 8" x 7/32"(25.4mm x 203mm x 5.6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

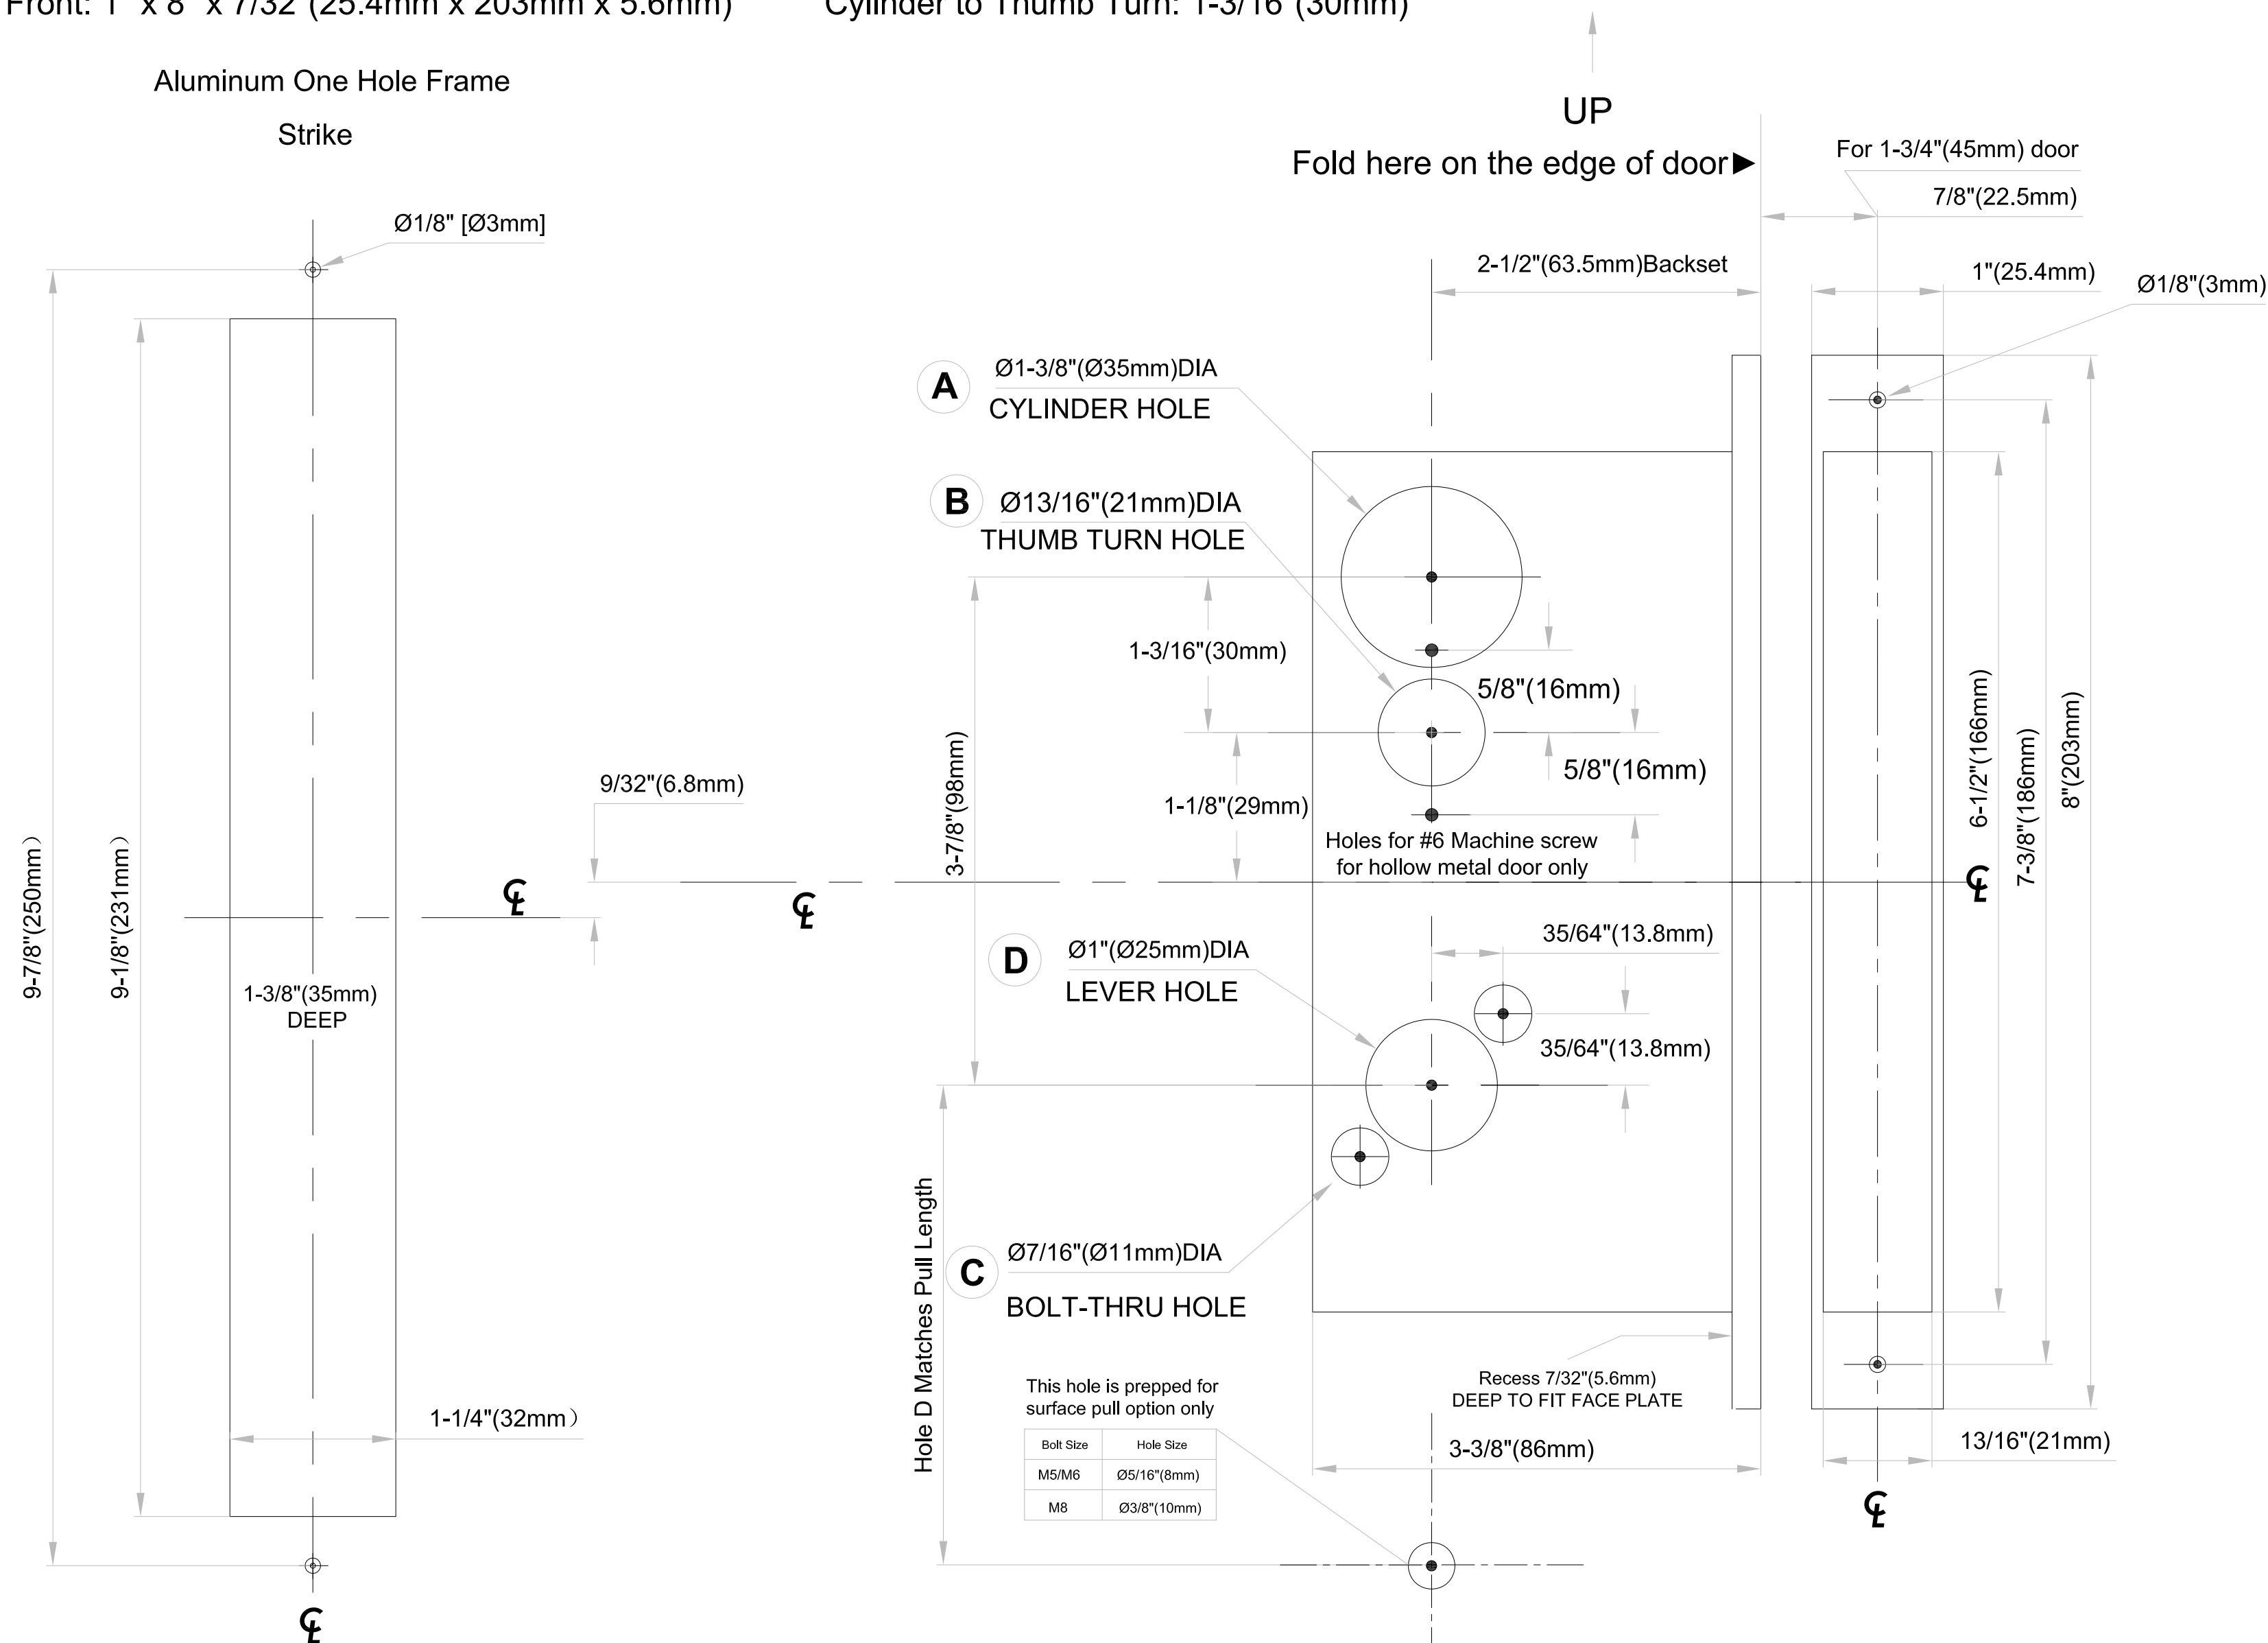

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

PM-TMPD97PT/PD97ATL/PD97ES-3D-38-212
V20250523