



1. Fasten the 3mm Mounting Spacer, Connecting Plate, and Mounting Plate to the door frame using the M5 x 30mm wood screws.

NOTE: The strike can be vertically adjusted by using different holes in the Mounting Spacer. Height is adjusted in 2mm intervals and can be adjusted a total of 6mm upward or 6mm downward



2. Clip the strike into the mounting plate as indicated.

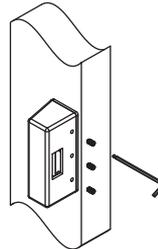

3. Tighten the strike with the M5x10mm set screws using the Allen Key.

No.	Parts Description	Qty
1	Mounting Spacer, 3mm	1
2	Connecting Plate	1
3	Mounting Plate	1
4	M5x30mm Wood screws	3
5	WS90L Cast Strike	1
6	M5x10mm Set screw	3